

Remote Controller

3.2 遙控器

3.2.1 按鍵說明

1. 待機鍵

長按 3S 後，相機將進入待機模式。再次長按 3S，相機將再次自檢並返回 HOME 位置。（注意：如果打開了開機模式並且設置了預設 0，並且 12s 內沒有任何操作，它將自動指向指定的預設位置。

2. 攝像機地址選擇

選擇要控制的攝像機地址

3. 數字鍵

設置或運行 0-9 個預設

4. * . # 鍵

組合鍵使用

5. 聚焦控制鍵

自動聚焦：進入自動聚焦模式。

手動對焦：相機對焦模式為手動

通過按[focus +]或[focus-]進行調整將相機對焦模式切換為手動對焦。

6. 縮放控制鍵

變焦 +：近鏡頭

變焦 -：遠鏡頭

7. 設置或清除預設鍵：

設置預設：設置預設鍵+ 0-9 數字鍵：

清除預設鍵：清除預設鍵+ 0-9 數字鍵

8. 平移/傾斜控制鍵

按下鍵：上

按下鍵：下

按鍵：左

按鍵：向右

“HOME” 鍵：返回中間位置或進入下一級菜單


9. BLC 控制鍵

背光燈開/關：打開或關閉背光燈

10. 菜單設定

打開或關閉 OSD 菜單

進入/退出 OSD 菜單或返回上一個菜單。

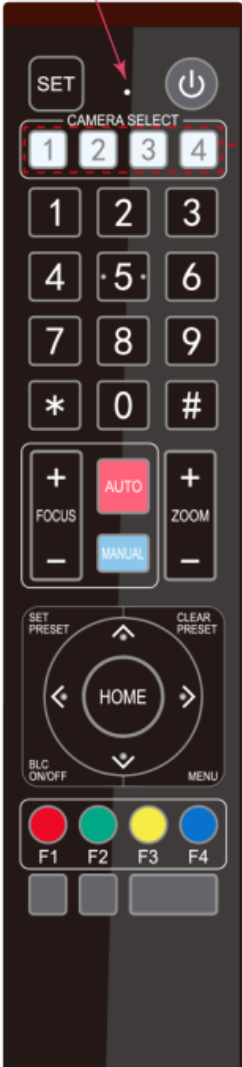

11. 相機紅外遙控器地址設置

【*】+【#】+【F1】：攝像機地址 1

【*】+【#】+【F2】：攝像機地址 2

【*】+【#】+【F3】：攝像機地址 3

【*】+【#】+【F4】：攝像機地址 4

12. 按鍵組合功能

- | | |
|---------------------------------------|---------------------------------|
| 1) 【#】+【#】+【#】：清除所有預設 | 2) 【*】+【#】+【6】：恢復出廠設置 |
| 3) 【*】+【#】+【9】：撥動開關 | 4) 【*】+【#】+Auto: 進入老化模式 |
| 5) 【*】+【#】+【3】：菜單設置為中文 | 6) 【*】+【#】+【4】：菜單設置為英文 |
| 7) 【*】+【#】+Manual: 恢復默認的用戶名·密碼和 IP 地址 | 8) 【#】+【#】+【0】：切換視頻格式為 1080P60 |
| 9) 【#】+【#】+【1】：切換視頻格式為 1080P50 | 10) 【#】+【#】+【2】：切換視頻格式為 1080I60 |
| 11) 【#】+【#】+【3】：切換視頻格式為 1080I50 | 12) 【#】+【#】+【4】：切換視頻格式為 720P60 |
| 13) 【#】+【#】+【5】：切換視頻格式為 720P50 | 14) 【#】+【#】+【6】：切換視頻格式為 1080P30 |
| 15) 【#】+【#】+【7】：切換視頻格式為 1080P25 | 16) 【#】+【#】+【8】：切換視頻格式為 720P30 |
| 17) 【#】+【#】+【9】：切換視頻格式為 720P25 | |

3.2.2 應用領域

完成初始化後，它可以接收並執行 IR 命令。按下遙控器按鈕，指示燈閃爍；鬆開按鈕，指示燈停止閃爍。用戶可以通過紅外遙控器控制搖攝/傾斜/縮放，設置和運行預設位置。

關鍵說明：

1. 在此說明中，“按下鍵”是指單擊而不是長按，如果需要長按一秒鐘以上，則會給出特別提示。
2. 如果需要組合鍵，請按順序進行。例如：“【*】+【#】+【F1】”先按“【*】”，再按“【#】”，最後按“【F1】”。

Camera Selection



Select the camera address to control.

2) Pan/Tilt Control



Up: press ▲
Down: press ▼
Left: press ◀
Right: press ▶
Back to middle position: press “【HOME】”

Press and hold the up/down/left/right key, the pan/tilt will keep running, from slow to fast, until it runs to the endpoint; the pan/tilt running stops as soon as the key is released.


3) Zoom Control



ZOOM IN: press “ZOOM ▼” key
ZOOM OUT: press “ZOOM ▲” key

Press and hold the key, the camera will keep zooming in or zooming out and stops as soon as the key is released.

4) Focus Control

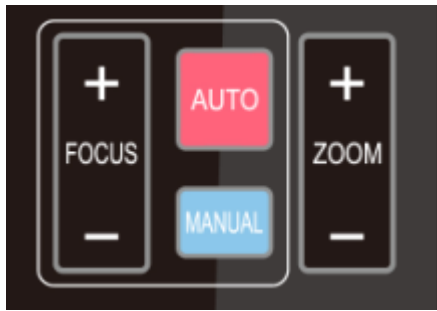

Focus (near): Press "【focus+】" key (Valid only in manual focus mode)

Focus (far): Press "【focus-】" key (Valid only in manual focus mode)

Auto Focus: Support

Manual Focus: Support

Press and hold the key, the action of focus will keep continue and stops as soon as the key is released.

5) BLC Setting



BLC ON / OFF: support

6) Presets Setting, Running, Clearing



1. Preset setting: to set a preset position, the users should press the "【SET PRESET】" key first and then press the number key 0-9 to set a relative preset,

Note: 10 preset positions in total are available by remote controller.

2. Preset Running: Press a number key 0-9 directly to run a relative preset.


Note: Action in vain if a relative preset position is not existed.

3. Preset clearing : to clear a preset position, the user can press the "【CLEAR PRESET】" key first and then press the number key 0-9 to clear the relative preset;

Note : press the "【#】" key three times continually to cancel all the presets.



7) Camera Remote Controller Address Setting

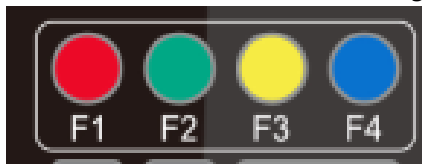

【*】 + 【#】 + 【F1】 :Camera Address No.1

【*】 + 【#】 + 【F2】 :Camera Address No. 2


【*】 + 【#】 + 【F3】 :Camera Address No. 3

【*】 + 【#】 + 【F4】 :Camera Address No. 4

3.3 MENU SETTING

3.3.1 Main Menu

In normal working mode, press **【MENU】** key to display the menu, using scroll arrow to point at or highlight the selected items.

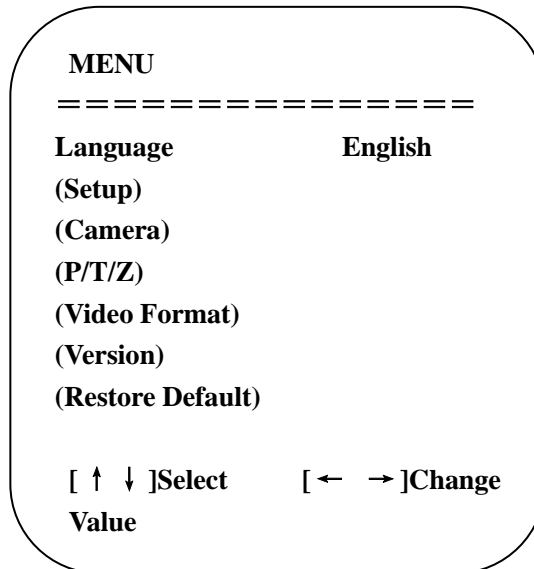

LANGUAGE: Language setting, Chinese / English

SETUP: System setting

CAMERA OPTION: Camera setting

PTZ OPTION: Pan tilt setting

VERSON: camera version setting

Restore Default: Reset setting

[↑ ↓] **Select:** for selecting menu


[← →] **Change Value:** for modify parameters

[MENU] Back: Press [MENU] to return

[Home] OK: Press [Home] to confirm

3.3.2 System Setting

Move the pointer to the (Setup) in the Main Menu, click the **【HOME】** key and enter into the (System Setting) as shown below,

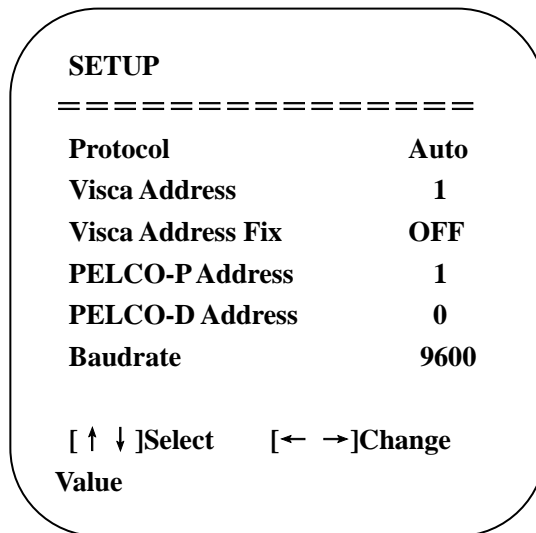

PROTOCOL: VISCA/Pelco-P/Pelco-D/Auto


Visca ADDR: VISCA=1~7 Pelco-P=1~255 Pelco-D = 1~255

Baud rate: 2400/4800/9600/115200

Visca Address Fix: On/Off

3.3.3 Camera Setting

Move the pointer to the (CAMERA) in the Main Menu, click the **【HOME】** key and enter the (CAMERA) as follow,

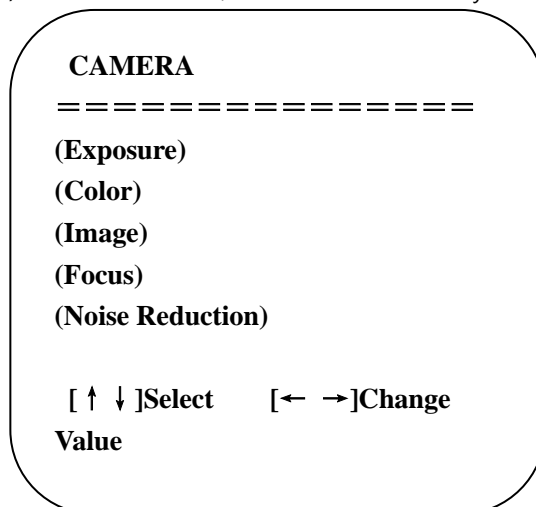

EXPOSURE: Enter into Exposure setting

COLOR: Enter into color setting

Image: Enter into image setting

Focus: Enter into focus setting

Noise Reduction: Enter into noise reduction

1) EXPOSURE SETTING

Move the pointer to the (EXPOSURE) in the Main Menu, click the **【HOME】** and enter the (EXPOSURE SET) as follow,

EXPOSURE	
=====	
Mode	Auto
EV	OFF
BLC	OFF
Anti-Flicker	50Hz
Gain Limit	3
WDR	5
[↑ ↓]Select [← →]Change Value	

Mode : Auto, Manual, Shutter priority, Iris priority and Brightness priority.

EV : On/Off (only available in auto mode)

Compensation Level: -7~7 (only available in auto mode when EV is ON)

BLC: ON/OFF for options (only available in auto mode)

Anti-Flicker: OFF/50Hz/60Hz for options (only available in Auto/Iris **priority**/Brightness **priority** modes)

Gain Limit: 0~15(only available in Auto/ Iris **priority** /Brightness **priority** mode)

WDR: Off,1~8

Shutter

Priority:1/25,1/30,1/50,1/60,1/90,1/100,1/120,1/180,1/250,1/350,1/500,1/1000,1/2000,1/3000,1/4000,1/6000,1/10000(only available in Manual and Shutter priority mode)

IRIS Priority:OFF,F11.0,F9.6,F8.0,F6.8,F5.6,F4.8,F4.0,F3.4,F2.8,F2.4,F2.0,F1.8(only available in Manual and Iris priority mode)

Brightness: 0~23 (only available in Brightness **priority** mode)

2) COLOR SETTING

Move the pointer to the (COLOR) in the Main Menu, click the **【HOME】** and enter the (COLOR SET) as follow,


COLOR	
=====	
WB Mode	Auto
Saturation	80%
Hue	7
AWB Sensitivity	High
Color style	Default
Color temp	Low
[↑ ↓]Select [← →]Change Value	

WB Mode: Auto, 3000K、3500K、4000K、4500K、5000K、5500K、6000K、6500K、7000K, Manual, One Push

Focus Mode: Auto, manual
AF-Zone: Up, middle, down
AF-Sensitivity: High, middle, low

5) NOISE REDUCTION


Move the pointer to the (NOISE REDUCTION) in the Menu, click the **【HOME】** and enter the (NOISE REDUCTION) as follow,

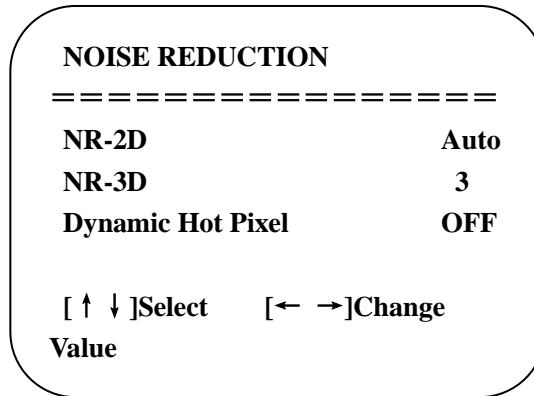

2D Noise Reduction: Auto, close, 1~7
3D Noise Reduction: Close, 1~8
Dynamic Hot Pixel: Close, 1~5

3.3.4 P/T/Z


Move the pointer to the (P/T/Z) in the Main Menu, click the **【HOME】** and enter the (P/T/Z) as follow,

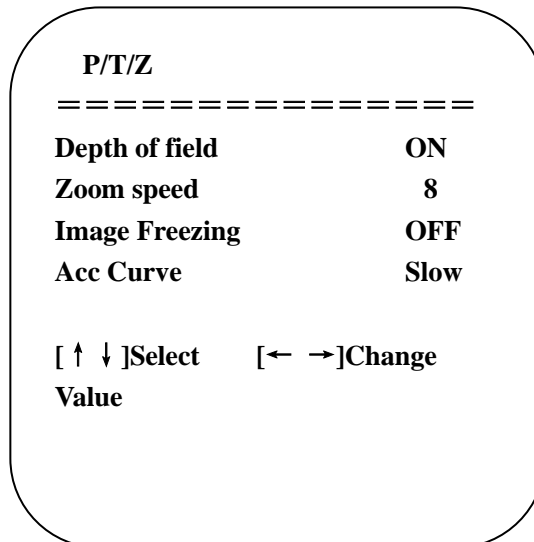

Depth of Field: Only effective for remote controller, On/ Off;
 When zoom in, the PT control speed by remoter will become slow),
Zoom Speed: Set the zoom speed for remote controller,1~8
Image Freezing: On/Off
Accelerating Curve: Fast/slow

3.3.5 Video Format

Move the pointer to the (Video Format) in the Menu, click the **【HOME】** and enter the (Video Format) as follow,

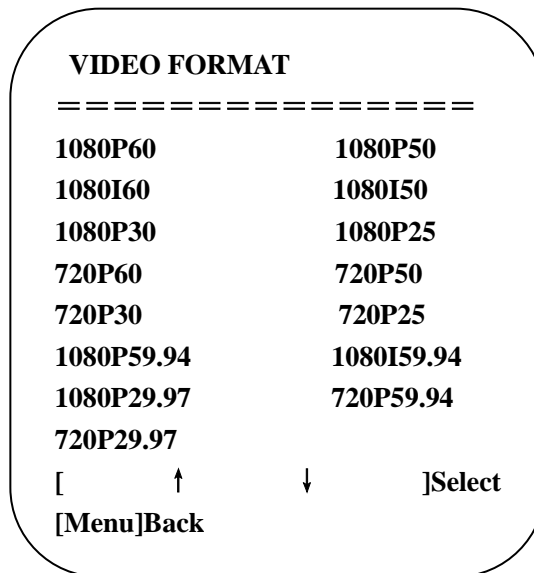


Note: 1. S: 1080P60 Downward Compatibility; M: 1080P30 Downward Compatibility
 2. Exit menu after modifying parameter to save it after powered off

S Version : 1080P60 · 1080P50 · 1080P30 · 1080P25 · 1080I60 · 1080I50 · 720P60 · 720P50 · 720P30 ·
 720P25 · 1080P59.94 · 1080I59.94 · 1080P29.97 · 720P59.94 · 720P29.97 Optional

M Version : 1080P30 · 1080P25 · 1080I60 · 1080I50 · 720P60 · 720P50 Optional

3.3.6 Version


Move the pointer to the (VERSION) in the Main Menu, click the **【HOME】** and enter the (VERSION) as follow,

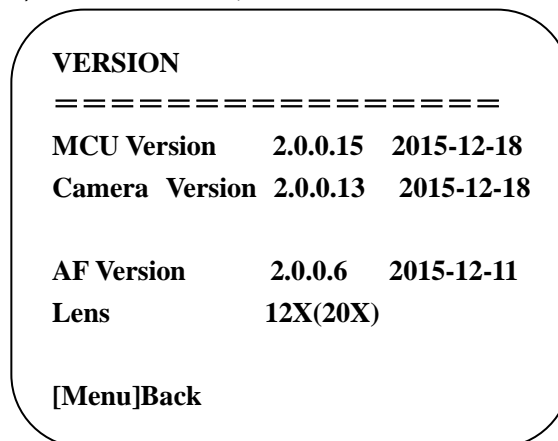

- MCU Version:** Display MCU version information
- Camera Version:** Display camera version information
- AF Version:** Display the focus version information
- Lens:** Display the lens zoom

3.3.7 Restore Default

Move the pointer to the (RESTORE DEFAULT) in the Main Menu, click the **【HOME】** and enter the (RESTORE DEFAULT) as follow,

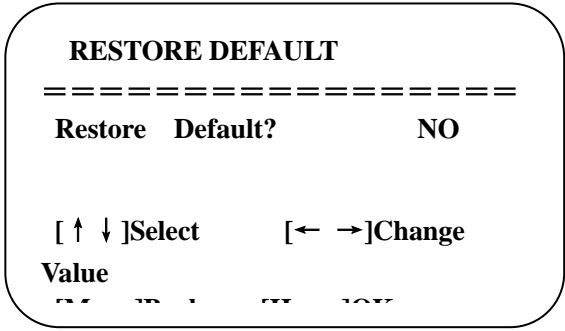

Restore default: options: yes/no; after restoring default, the video format won't be restored.

Note: If the address of former remoter is not 1 but another one from 2,3,4,the corresponding camera address will restore to 1 when all parameters or system parameters are restored. User should change the remoter address to be 1 (press No.1 according to the camera so to get normal operation)